



- Crafted for Reliability -




Product Tutorial Videos



24 Hours
If you have any questions, please contact the 24-hour after-sales service and send your issues to the following email address
Email: Digilandservice@126.com
Please provide your purchase order number in the remarks

Reading Mode

Reading mode optimizes the screen display to enhance the reading experience and reduce eye strain during prolonged use. To enable Reading mode and choose desired effect, go to **Settings > Display > Reading mode**.

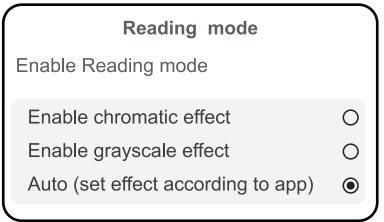

- **Chromatic effect:** Enhances colors for better vibrancy and contrast.
- **Grayscale effect:** Converts the display to grayscale, minimizing distractions and improving text clarity.
- **Auto:** Automatically applies specified reading effects for each app, personalizing the reading experience.

Factory Reset

Factory reset

To erase all data from your tablet, you can reset your tablet to factory settings. Please back up important data before performing the factory reset.

To perform a factory reset, follow the below steps:

1. From the Home screen, swipe up to access App tray and tap **Settings**.
2. Tap **System > Reset options > Erase all data (factory reset)**.
3. Enter your PIN (if previously set).
4. Tap **Erase all data** again to confirm.
5. Your tablet will start the reset process.


Force shutdown

If your device is not responding and you want to perform a force shutdown, simply press and hold the **Power** button for about 8 seconds.


Navigation Mode

The navigation mode on your tablet allows you to choose between Gesture navigation and 3-Button navigation.

Gesture navigation

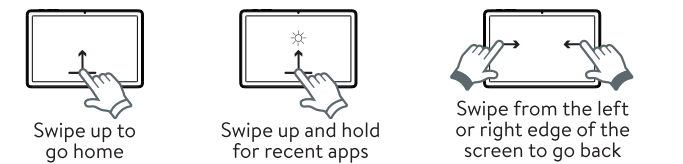

3-Button navigation

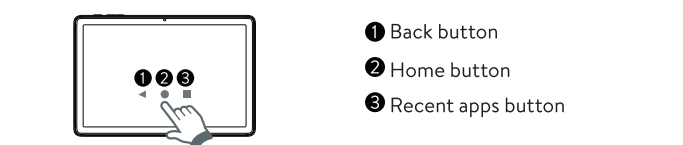 

To select the mode that best fits your preferences, go to **Settings > System > Gestures > Navigation mode**.

Get Started

Turn on your tablet

Press and hold the **Power** button for a few seconds until the tablet turns on.


Turn off your tablet

Press the power button and the volume up button as the same time.

Google Gemini

Google Gemini is your truly helpful personal AI assistant. You can type, talk or add an image for all kinds of help while you're on the go. To start chatting with Gemini, just long press the Power button and start. Check responses. Setup required. Compatibility and availability varies.



Get To Know Your Tablet

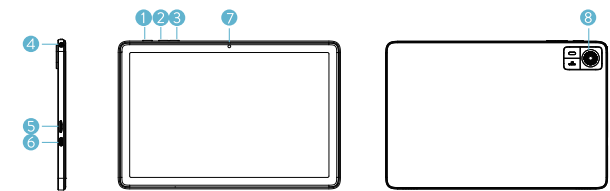

- | | | |
|-------------------|---------------------|-----------|
| 1. Power | 2. Vol+ | 3. Vol- |
| 4. Headphones | 5. Memory Card Slot | 6. Type-C |
| 7. Camera (Front) | 8. Camera (Rear) | |

To learn more about your tablet, go to **Settings > About tablet > Get to know your tablet** for detailed information.

In The Box

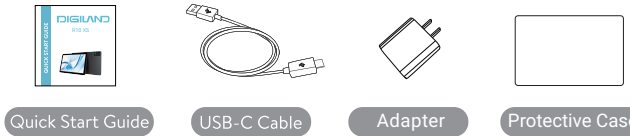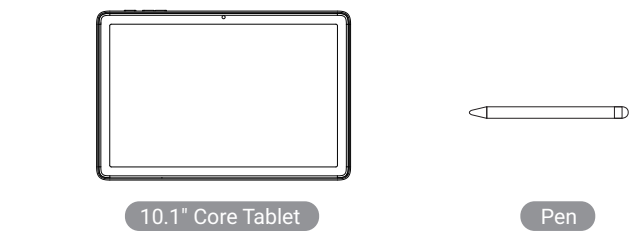

The USB-C port can connect to headphones that are compliant with the USB-C standard.

QUICK START GUIDE



R10 XS



封底

Product Warranty Card

4. The warranty certificate does not match the product information or the certificate has been altered or missing;
5. The product has exceeded the agreed warranty period;
6. Appearance wear and natural aging of consumables caused by normal use.

Service Channels:

If you need technical support or warranty services, please contact us through the following methods:
Customer Service Email: Digilandservice@126.com
Service website: <https://tianshi-digital.com/>
We suggest that you prioritize initiating service requests through the official customer service channel of the original purchasing platform.

Purchase Date	Platform Order No.	Contact Email

Product Warranty Card

Warranty Period:

This product is entitled to 12 months of free repair service from the effective date of purchase.

Warranty Scope:

Under the premise of complying with the usage regulations, any performance failure caused by manufacturing defects of the product itself can enjoy free repair services.

Disclaimer Clause:

The following situations are not within the scope of warranty liability:
1. Damage caused by force majeure (such as earthquakes, fires, floods, typhoons, etc.);
2. Malfunctions caused by improper use, maintenance, and storage by consumers;
3. Damage caused by unauthorized personnel dismantling, repairing, or modifying without the authorization of our company;

Certification Information

	This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation. WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.
FCC Radiation Exposure Statement	This equipment complies with FCC RF radiation exposure limits for mobile devices. This equipment shall be installed and operated with a minimum distance of 20 cm between the radiator and the human body.

	Hereby, declares that this product Model complies with Directive 2014/53/EU (RED), Directive 2011/65/EU (RoHS). Radio frequency bands and maximum transmit power: Bluetooth: 2402-2480 MHz, Max EIRP: ≤20 dBm
RF Exposure Notice	This device meets EU requirements for limitation of exposure to electromagnetic fields. The device should be installed with minimum 20 cm distance between the antenna and persons.

Compliance Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and radiates radio frequency energy and may cause harmful interference to radio communications if not installed and used in accordance with the instructions.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or position the receiving antenna.
- Increase the distance between the device and the receiver.
- Connect the device to an outlet on a circuit different from the one to which the receiver is connected.
- Consult your dealer or an experienced radio/TV technician for assistance.

WARNING: Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Safety Instructions

- Electrostatic discharge is normal and can occur in electronic devices, and although it is not life-threatening, it can damage files or damage memory and its contents.
- Disposing of the battery in a fire or hot oven, or mechanically crushing or cutting the battery, may result in an explosion.
- Leaving the battery in extremely hot surroundings, such as sunlight, fire, or hot surfaces, may result in an explosion or leakage of flammable liquid or gas.
- Batteries subjected to extremely low air pressure may cause an explosion or leakage of flammable liquid or gas.
- Disassembling the tablet will void the manufacturer's warranty.
- Tablet functionality, hardware, software, and warranty information may be improved or modified by the manufacturer or their respective owners and are subject to change without notice.

From the Home screen, swipe up to access App tray and tap **Settings > About tablet > Regulatory labels** to view the certification information. Applicable products have the FCC logo on the product label and/or an FCC ID in the format FCC ID: XMF-MID1110.

Google, Android, Gemini, Google Play and other marks are trademarks of Google LLC.

Safety Instructions

- The tablet is not moisture-proof/waterproof. Avoid using tablets around water sources.
- Avoid dropping or forcibly placing the tablet on a hard surface. This may damage the screen or internal electronics and void the warranty.
- Do not use alcohol, thinner, or benzene to clean the tablet surface.
- Use only cleaning products that are designed for computer tablet devices.
- Do not use the tablet while walking or driving.
- To prevent possible hearing damage, do not listen at high volumes for long periods of time. When you are exposed to high sound pressure, a warning will be displayed on the device.
- The images in this guide may differ slightly from the actual product.
- Charge the tablet battery under any of the following circumstances:
 1. The battery level icon indicates low power, by showing a drained, red battery icon.
 2. The tablet powers-off automatically, and continues to do so even after restarting.
 3. On-screen buttons do not work.
- Do not suddenly disconnect the tablet when formatting, uploading or downloading data. This can lead to program errors (e.g., system or screen "freezing").

Safety Instructions

Refer to the electrical and safety information on the tablet before installing or operating the appliance.

- Do not install near any heat sources such as radiators, heat regulators, stoves or other equipment (including amplifiers) that generate heat.
- Use only accessories specified or provided by the manufacturer. Battery is non-removable. Improper replacement may present a risk of fire, explosion, leakage, or other hazards.
- The power plug should be kept in a state that can be disconnected at any time to avoid emergencies.
- The device should not be exposed to dripping or splashing water. Use the device at an ambient temperature between 0° and 35° C (32° to 95° F) and at an altitude of no more than 2000 m (air pressure not less than 80kPa). Store or transport the device at ambient temperatures between -20° and 50° C (-4° to 122°F). Low or high temperature conditions may cause the device to change its behavior to regulate its temperature.
- We want you to have a safe and enjoyable experience. Please read the following instructions and precautions before using the tablet.
 - Warning: This product may contain a chemical known to the State of California to cause cancer, birth defects, or other reproductive harm.
- Avoid using the tablet in extremely hot, cold, dusty, and humid environments.

Troubleshooting

Problem	Solution/Prevention
Cannot turn my device on.	• Press and hold the Power button for more than 3seconds. • Charge the tablet for 30 minutes.
My tablet does not charge.	• Check that the power outlet is working and that the charger is properly plugged into the outlet. • If the current charger is not working, try using another charger. It is recommended to use a 10W charger for optimal charging performance. • Reconnect the charger to the device and let it charge for 10-15 minutes. Then press the Power button to check if there is a charging prompt.
My tablet cannot connect to Wi-Fi.	• Make sure the WIFI on your tablet is ON; • Make sure you input the correct password; • Reboot the router • Make sure there is no filter setting or device connection limitation in the settings of the router; • Forget the current WIFI, reset the router and connect to the network again
My tablet runs slow.	• Close or uninstall unwanted apps. • Check if the storage is almost full. • If it is, consider uninstalling some apps or deleting unnecessary files.
My tablet's system is abnormal.	• Uninstall the app displaying the error message; then download an install again. • Restore factory settings.

封面

正面